

WallFires Safe Use and Installation Manual

Thank you for purchasing a BioFires WallFire, please read this manual carefully before attempting to install or use your WallFire.

Provided with your WallFire

1 x WallFire Unit	1 x Plastic Jug for decanting BioFuel
1 x WallFire Front Cover	1 x Extended Lighter
1 x Mounting Bracket	1 x Safe Use and Installation Manual
1 x Plastic Funnel	5 x Wall Plug (supplied)
1 x Tool for adjusting shutter	
5 x Galvanized Coach Screw (supplied)	

Requirement for hanging your WallFire

You will require the following items in order to install your WallFire

- 10mm Spanner
- Drill and 6mm Masonry Drill Bit
- Hammer
- Spirit Level

Please note: we do not advise that the WallFire is hung in any way other than that stated in this document.

Hanging your WallFire


When installing your WallFire, you should take the following in to consideration:

Hanging Height:

- Make sure you are able to fill the unit with fuel easily at your chosen hanging level.

Hanging Area:

- Think about how much traffic will be passing the WallFire - could people catch on it? As it is a liquid fuel the WallFire should be in an area where it will receive no bumps or knocks.
- Do not install the WallFire in an area which is drafty, close to fans or other ventilating devices.
- Be certain that there are no flammable materials, such as curtains, furniture etc within a 1 meter radius of the Wallfire.

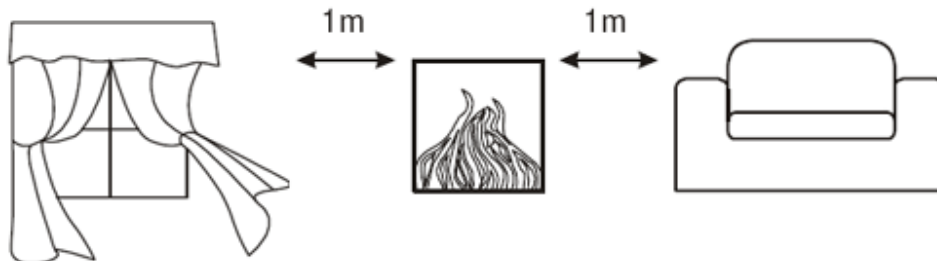

Hanging Surface:

- The WallFire should be fixed to a concrete / stone wall – it is not advised to secure against wood, plasterboard or any other soft, flammable surface.

WallFire Installation Instructions


1. Remove all outer packaging from your WallFire.
2. Next you need to remove the light grey front panel; to do this you have to loosen 4 bolts – 2 of these are located at the top of the WallFire Unit and 2 are located inside the burning area (you do not have to completely remove these bolts, just loosen them). Once these 4 bolts are loosened, lift the grey front panel about 3cm and remove it from the back burning unit – set aside.
3. Next, you need to hold the black hanging bracket at the level you would like to hang it, using a spirit level to make sure you hang the WallFire level, mark on the wall where the holes must be drilled.
4. Using a drill and a 6mm masonry drill bit, drill the 5 holes – be sure to drill the holes deep enough to accommodate the coach screw.
5. Next, using the wall plugs and coach screws supplied, secure the bracket to the wall with the hanging “lip” to the top.
6. Once all the coach screws are in place you can hang the burning unit on the hanging bracket.
7. Now your WallFire is on the wall, all that remains is to slip the grey front cover back on to the slots; the bolts that were loosened to remove the front cover can now be tightened to hold the panel securely in place.

WallFire Operating Instruction


Only light your WallFire once you have successfully followed the installation instructions as per this document.

CAUTION! – DO NOT ADD MORE FUEL WHILST THE WALLFIRE IS BURNING

1. Remove the front part of the WallFire by lifting out of the hooks

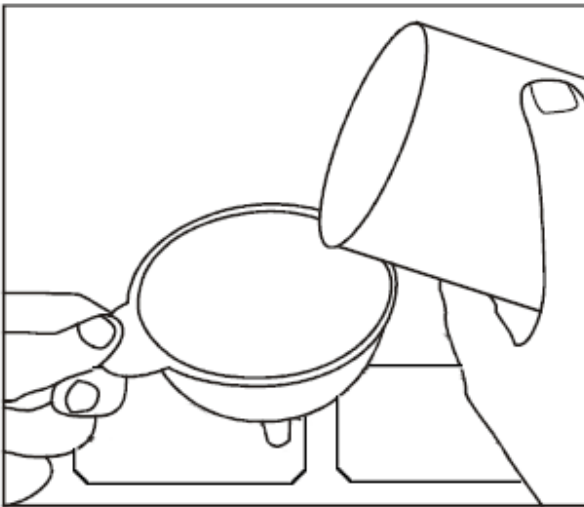

2. Using the supplied funnel and jug, pour in upto 1.5 litres of Biofuel, taking care not to spill fuel – if fuel does spill it must be left to dry completely before lighting your WallFire

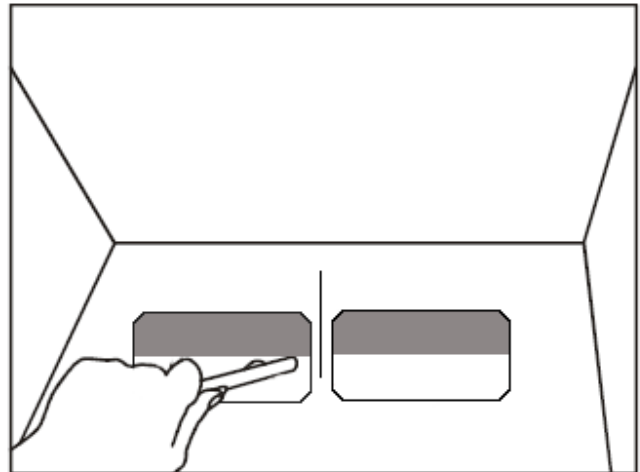


3. Set the shutter setting at half, using the provided extended lighter, ignite the BioFuel in the reservoir by bringing the flame close to the fuel surface


You can adjust the flame size by moving the reservoir shutter using the supplied metal tool. Regulate the size of the flame in a range between maximum opening, to give the largest flame and fully closed to extinguish the flame; the shutter can be set at any level. Keep in mind that the range at which the shutter is set will change the burning rates of the fuel.

WallFire Shutter Settings


Using to tool provided you can regulate the shutter setting to control flame size, fuel consumption and also to extinguish the WallFire – settings are as follows:

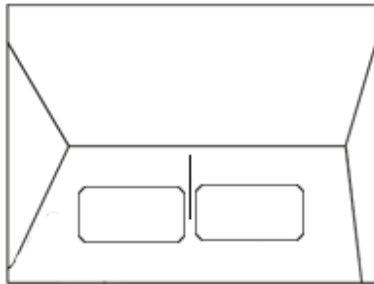

Fully Open Setting

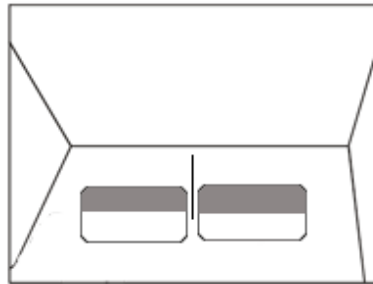


Half Open Setting

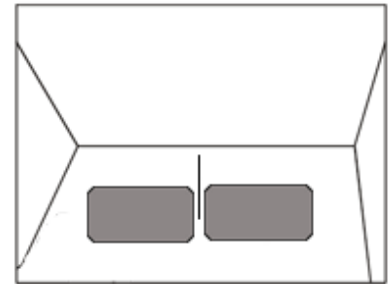

Fully Closed Setting

Always leave the WallFire to cool for 10 minutes before refilling with fuel and relighting.

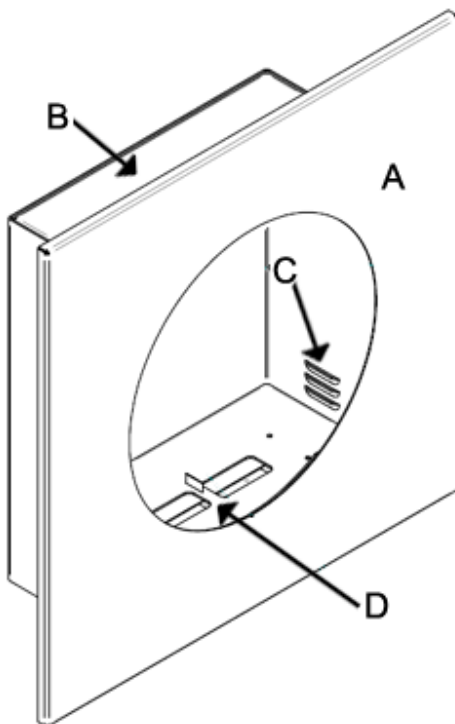

WallFires Roxy Material Specification

- A. Constructed of steel and powder coated with heat resistant paint
- B. Constructed of steel and powder coated with heat resistant paint
- C. Air Vents
- D. WallFire Elements – stainless steel, acid-proof and finished with heat proof paints.

General Safety Advice

- Under no circumstances should the WallFire be lit before it has been secured to a wall following these instructions.
- Do not sit anything on top of your WallFire, the area does become hot and units on top of the WallFire could become damaged or cause a fire.
- It is essential that the room where the WallFire is installed has adequate ventilation, either forced ventilation or a slightly open window.
- When WallFire is lit it must never be left unattended and children and pets should be kept at a safe distance.
- If you believe that your WallFire is damaged or defective in any way, do not light and contact the seller.
- Do not move the WallFire when it is burning, nor must you remove the cover while the WallFire is in use.
- Do not cover the WallFires, or the ventilation slots etc. as it may cause fire.
- Do not touch the WallFire whilst burning or directly after it has finished burning, as it could cause burns.
- Warranty and Guarantee shall be void if the construction of the WallFire is altered.
- Do not place any items inside the cavity of the WallFire.

BioFuel

- Do not use any other fuel than BioFires BioFuel in your WallFire; using different fuels can result in the emission of a variety of gasses during the burning process, which may have negative health effects.
- Store BioFuel in a cool, dark place which is inaccessible by children, pets and unauthorized people.

Cleaning and Maintenance

- WallFires do not require any particular maintenance except for general cleaning. To clean, use a soft, moist cloth – a gentle cleaning agent can be used if required.
- Cleaning should only be carried out when the WallFire is cold.